



SNO-CONE MACHINE

Operating Instructions

Canton Chair Rental

4850 Southway St SW Canton, OH 44706

330-477-7719 • 800-686-4331

After Hours Pager: 330-737-1227

www.cantonchairrental.com

TO OPERATE:

1. Place the water tray on a flat, even surface. Lead the hose into a bucket to collect melted ice. Install the machine on top of the tray.
2. Install the cylinder cone storage rack by sliding it into the slot on the side of the machine. Fill the rack from the top with paper cones.
3. Plug in the machine. Keep in mind the machine should be plugged into a dedicated 20 amp circuit with no other electrical devices. We recommend that you do not use an extension cord, but if you plan to use one, make sure it is a heavy duty (12 gauge, 25') extension cord.
4. Turn on the light switch.
5. Turn on the motor. Depending on the model, the machine will either have a switch or a button to engage the motor.
6. Using the large scoop, fill the gooseneck with ice cubes or chunks (no larger than 3" x 4" pieces) to about an inch from the brim. Push the handle down to press the ice against the cutterhead. A firm, even pressure is all that is required, but relieving the pressure two or three times on the way down can help the ice re-arrange itself. Too much pressure will produce coarse ice, and too little pressure will create mushy ice.
7. The motor gets warm, which will give you a surface temperature of 150 degrees, which is normal.
8. Fill the machine with ice to desired level. Crush any remaining ice in the gooseneck and turn off the motor. Serve using the small scoop, and place finished cones onto the cone display rack for flavoring.
9. Make sure that crushed ice does not pile up to the discharge chute, as this will jam the machine. If this occurs, clear out the ice with a plastic or wooden spoon or spatula. **DO NOT** use your hand. **MAKE SURE THE MOTOR IS OFF**, and then allow the remainder to melt out before continuing.

WHEN FINISHED:

1. Unplug the machine.
2. Wipe all surfaces clean with a towel.
3. **Ensure all of the following are returned to Canton Chair Rental:**
 - Syrup pumps
 - Scoops (large & small)
 - Cone storage rack
 - Cone display rack
 - Water tray & hose

Please return ALL parts to avoid additional charges!

WARNING:

- NEVER immerse the machine in water.
- ONLY put ice through the gooseneck.
- Keep fingers AWAY from the shaver body while the motor is running.
- DO NOT allow metal to enter the gooseneck or the blade will become damaged.



IMPORTANT!

We can ALWAYS be reached to assist you!

If you are experiencing problems with a rental item, please call us!

During business hours: **330-477-7719** or **1-800-686-4331**

After hours, weekends, or holidays: **330-737-1227**

We want your event to run smoothly and will work to solve your problem quickly! If you fail to contact us at the time you are experiencing problems, we may not be able to adjust your invoice once an item is returned.

A NOTE ABOUT ELECTRICAL EQUIPMENT:

PLUGGING IN:

- We recommend that you plug our equipment directly into a wall outlet.
- If you **MUST** use an extension cord, please use a heavy-duty cord (at least 12 gauges). Please refer to national and local electrical codes.
- If the equipment has a three prong-grounding plug, it must be plugged into a three holed grounded receptacle.
 - **Do not use a three-to-two prong adapter**, as this could reduce safety components and increase the risk of electric shock.
 - **Do not attempt to alter the electrical plug**. Serious injury or electrocution may result.
 - **A \$10 FEE WILL BE ASSESSED IF THE EQUIPMENT'S GROUND PLUG HAS BEEN TAMPERED WITH!**

CIRCUITS AND FUSES:

- Each of our electrical rental items (especially concession equipment, coffee makers, roasters, hot boxes and fountains) should be on its own 20-amp circuit. Even though some equipment may be rated at nine or ten amps, the machine may draw more power while it is starting up.
- **REMEMBER**, overloading an outlet may blow fuses or circuits. We recommend that you locate the proper power source hours before your event starts so you are sure to not have any surprises. You may run into problems using this equipment if it is not plugged into its own dedicated outlet. If you are experiencing problems, try using a different outlet.

BEFORE YOUR EVENT:

You have rented an item that has passed our electrical testing. We are unable to determine if the facility where you are using the unit has proper power. To ensure this equipment will work correctly for your event, we recommend that you do the following several hours prior to the start of your event:

Audio/Visual Items	Plug in and test (be aware of where spare bulb is in case you have one burn out).
Beverage Fountain	Plug in and fill with water. Make sure the light turns on and that the fountain flows correctly.
Chocolate Fountain	Assemble the fountain. Plug in and melt chocolate 1-2 hours prior to the start of your event. Start the fountain to insure proper chocolate flow. Once started, leave the fountain running throughout the event.
Coffeemaker	Plug in and fill with water. Make sure the water begins to heat.
Concession Equipment	Make a test batch.
Heat Lamp	Plug in and make sure bulb heats up.
Hot Box	Plug in and heat up.
Lighted Column	Plug in and light up.
Lighted Ice Tray	Plug in and light up.
Roaster	Plug in and make sure the roaster begins to heat up.

PLEASE CALL US RIGHT AWAY IF YOU EXPERIENCE ANY PROBLEMS!

WE WILL MAKE IT RIGHT!