

Canton Chair Rental

4850 Southway St SW Canton, OH 44706 330-477-7719 • 1-800-686-4331 • Pager 330-9664308 www.cantonchairrental.com

Cheese Warmer/ Dispenser (2 amps)

Instructions:

- 1. Plug electrical cord into 120-volt outlet.
- 2. Preheat the dispenser for **approximately 1 hour.**
- 3. Heat the bag of cheese with the cap on in a microwave before putting it in the preheated machine. Heat the bag for 3 minutes, then knead the cheese for 30 seconds. Place the bag back into the microwave for 2 minutes. Knead for 30 more seconds. Remove the cap with tool and snap the tube cap on and place the bag in the machine.
 - **HEATING IN MICROWAVE LONGER THAN FIVE MINUTES MAY RESULT IN DAMAGE TO THE BAG.
 - **MICROWAVES VERY. PLEASE BE CAREFUL NOT TO OVER HEAT BAG!!

**USE AN OVEN MITT IF BAG IS TOO HOT TO PLACE IN MACHINE

- 4. **Open** tube clamp by rotating cam counter clockwise. (refer to back of this page for a picture)
- 5. Guide tube through pump slot from top to bottom.
- 6. **Close** clamp by rotating cam clockwise.
- 7. Cut off end of tube below door with clean, sanitized scissors. Tip of tube should be visible and extend outside of dispenser to maintain sanitary conditions and to aid in dispensing product.

To Dispense Product:

- 1. Hold food or the nacho tray under the dispensing tube to receive product.
- 2. Press dispensing button until desired amount of product has been dispensed and release button or press once for portion controlled units.

To change an empty bag or take out the bag for cleaning:

- 1. Open door by pulling forward from the left side.
- 2. Open tube clamp by rotating cam counter clockwise.
- 3. Remove tube from pump slot by grabbing tube from lower end and pulling upward to tray.
- 4. Take out tubing and product bag by continuing to pull tubing upward.
- 5. Remove empty product bag with tubing from oven.
- 6. When you replace the empty bag with a new one, you need to microwave the new one. (see step 3 of instructions) Each bag gets a new tube.
- 7. Wipe down outside of the dispenser with a clean damp cloth if necessary.

Z:\Equipment\Concession Equipment\Cheese Warmer\Cheese Warmer.doc