

### ACE Electrical Equipment One Year Warranty

ACE warrants its equipment against defects in materials and workmanship, subject to the following conditions:

This warranty applies to the original owner only, and is not assignable.

ACE Electrical Equipment is warranted for one year, effective from the date of purchase by the original owner.

A copy of the original receipt, or other proof of purchase is required to obtain warranty coverage.

Should any product fail to function in its intended manner under normal use within the limits defined in this warranty, at ACE's discretion, such product will be repaired, replaced with a refurbished unit, or replaced with a new unit by ACE, after defective unit has been inspected and defect has been confirmed. ACE does not assume any liability for extended delays in replacing any item beyond its control. This warranty does not apply to rubber and non-metallic synthetic parts where usage, wear, or lack of preventative maintenance may create abnormal replacement rates, and these parts are excluded from this limited warranty.

This warranty covers products shipped into the 48 contiguous United States, Hawaii, and metropolitan areas of Alaska and Canada. Warranty coverage on products used outside the 48 contiguous United States, Hawaii and metropolitan areas of Alaska and Canada may vary. Contact ACE for details at 1-800-223-7750

The following conditions are not covered by warranty:

- Equipment failure relating to improper installation, improper utility connection or supply and problems due to improper ventilation.
- Equipment that has not properly been maintained, damage for improper cleaning, and water damage to controls.
- Equipment that has not been used in an appropriate manner, or has been subject to misuse, neglect, abuse, accident, alteration, negligence, damage during transit, delivery or installation, fire, flood, riot, or act of God.
- Equipment that has the model number or serial number removed or altered.
- Equipment on which the security seal has been broken.

If the equipment has been changed, altered, modified, or repaired without express written permission from ACE, then the manufacturer shall not be liable for any damages to any person or to any property, which may result from the use of this equipment thereafter.

This equipment is intended for commercial use only. Warranty is void if equipment is used in other than a commercial application.

In the event your repair is not covered under the stated warranty provisions, parts are available by calling 1-800-223-7750. Equipment not covered by repair should be picked up from our warehouse facility within 10 business days from notification date. Any and all arrangements and expenses for the return of this merchandise is your responsibility.

"THE FOREGOING WARRANTY IS IN LIEU OF ANY AND ALL WARRANTIES EXPRESSED OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSES AND CONSTITUTES THE ENTIRE LIABILITY OF ACE. IN NO EVENT DOES THE LIMITED WARRANTY EXTEND BEYOND THE TERMS STATED HEREIN."



# Induction cooker Instruction Manual

**Model:IND-B120V**

**Do Not Immerse In Water  
Use Only A Damp Cloth  
And Dish Soap. No Scratch  
Pad Or S.O.S.**



## I. Specification

- 1). Item No.: IND-B120V
- 2). Power Rate: 500-1800W
- 3). Voltage: 120V ~ 60Hz
- 4). Temperature: 140°F -460°F

## II. Importance

Please read carefully the following instructions before using the induction cooker.

- 1). Do not plug with wet hands in order to avoid getting electric shock.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the power cord is damaged or the plug does not fit the socket safely.
- 4). Do not open the cooker to replace spare parts by yourself.
- 5). Do not use the cooker closed to flame or wet places.
- 6). Do not use where children can easily touch the cooker, or allow children to use the cooker by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the cooker together with a pot.
- 9). Do not heat a pot empty or overheat to avoid dry boiling.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the cooker close to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards or cassette tapes.
- 18). The power cord must be replaced by qualified technicians.
- 19). Stands for the surface is liable to get hot during use.

## III. How to Use

- 1). Please put suitable cookware onto the plate of induction cooker, and connect the plug to suitable socket.  
After connected, the light of Power will shine, indicating that the power is connected normally.
- 2). Pressing ON/OFF, the light of Power will shine, Pressing HEATING, the light of heating will shine, indicating that the induction cooker is entering the state of heating; the default power of heating is

1200W. Adjust the power rate from level 500w-1800W.

- 3). Pressing TEP, the light of Keep temp will shine, indicating the induction cooker is entering the state of keeping temperature, the default temperature is 430°F, Adjust the temperature from 140°F to 460°F by turning the knob.
- 4). Adjust the time from 0 minute to 170 minutes by "▼" or "▲" at the state of Time.
- 5). When pressing ON/OFF during the working state, the induction cooker will stop working immediately.  
After stopping working, the fan will cool down the induction cooker for one minute, and then will be off.
- 6). After pressing ON/OFF, the induction cooker will shut off automatically if there is no any operation within 2 hours.

## IV. Usable and Non-usable Utensils

### 1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



### 2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



## V. How to Clean

- 1). Unplug and wait until the cooker is cooled down completely. Clean the cooker after using each time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).