



4850 Southway St SW Canton, OH 44706  
330-477-7719 • 1-800-686-4331 • Pager 330-966-4308  
www.cantonchairrental.com

### **Hot Dog Roller Grill (120 volt, 8.3 amps)**

#### **Operating Instructions:**

1. Install the hot dog roller grill in a level position.
2. Plug in. Keep in mind these units should be on their own 20 amp circuit for each one.  
We recommend that you do not use an extension cord. Plug directly into the outlet. If you are going to use an extension cord, please make sure it is heavy duty, at least a 12 gauge, 25' extension cord.
3. Place hot dogs on rollers. Turn heat to designated temperature. Left knob controls the heat of one set of five rollers and the right controls for the other set of five rollers.
4. For low heat, set controls to LOW using one or both sets of rollers. For high capacity, set controls to MEDIUM or HIGH using both sets of rollers.

#### **Cleaning Instructions:**

1. DO NOT USE STEEL WOOL TO CLEAN!!!
2. Remove any remaining hot dogs from rollers.
3. Remove drip pan and clean thoroughly.
4. Use a mild detergent and water to clean the roller grill. Rinse after washing and dry thoroughly.
5. Re-insert drip pan beneath the rollers.
6. **Please return all parts supplied with the machine to avoid additional charges!**