


10 X 10 Pop Up Installation Instructions

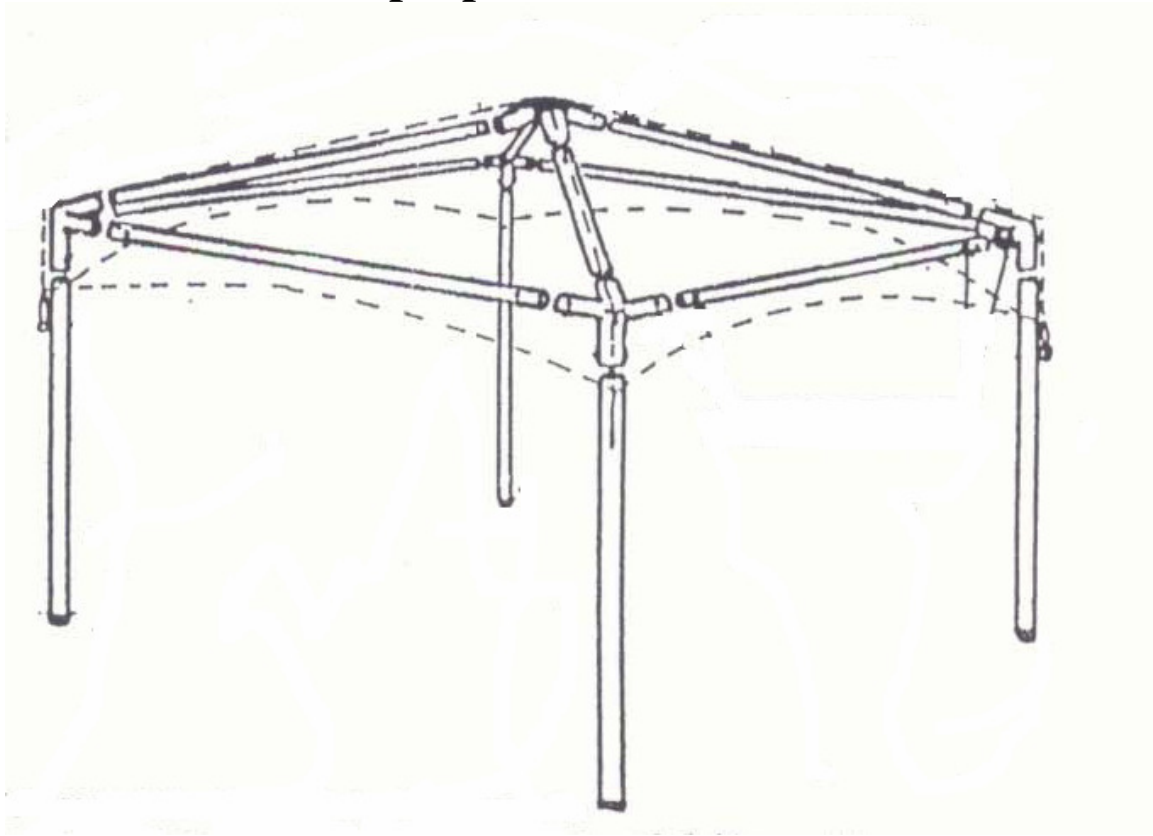

1. Assemble the frame as in the diagram.
 - a. Assemble the perimeter first by sliding two 5' poles together to make a 10' pole. Then slide the 10' poles into the corner brackets and locking them into place with the snap buttons.
 - b. Connect the rafters to the corner brackets and the center cluster and lock them into place with the snap buttons.
2. Lay the canopy over the frame.
3. Insert the legs into the bottom corner brackets and lock into place using the snap buttons.
4. Attach the tent to the frame by clipping the snap, at each tent corner, to the eyebolt on the leg posts.
5. Secure the tent to frame by using the white straps with the plastic clips.
6. Ropes, to hold the tent secure, are attached to the eyebolts and secured to stakes in the ground.